USER MANUAL Model T1-200

Smart tracking, everywhere, anytime.





1.1 Product Parameters

	Name	Specification
Main Features	Size	82x44x15mm
	Battery	200mAh
	Voltage Range	9V-90V
GPS	GPS Fixed Time	Hot<1 sec(Open Sky)
	GPS Fixed Time	Cold<32 sec(Open Sky)
	Positioning Accuracy	≤5m


1.2 Accessories List

ltem	Unit	Qty
Device	Pcs	1







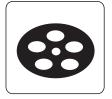

Trace Playback



Geo-fence




```
4G Network
```



Real-time Tracking




Geo-defense

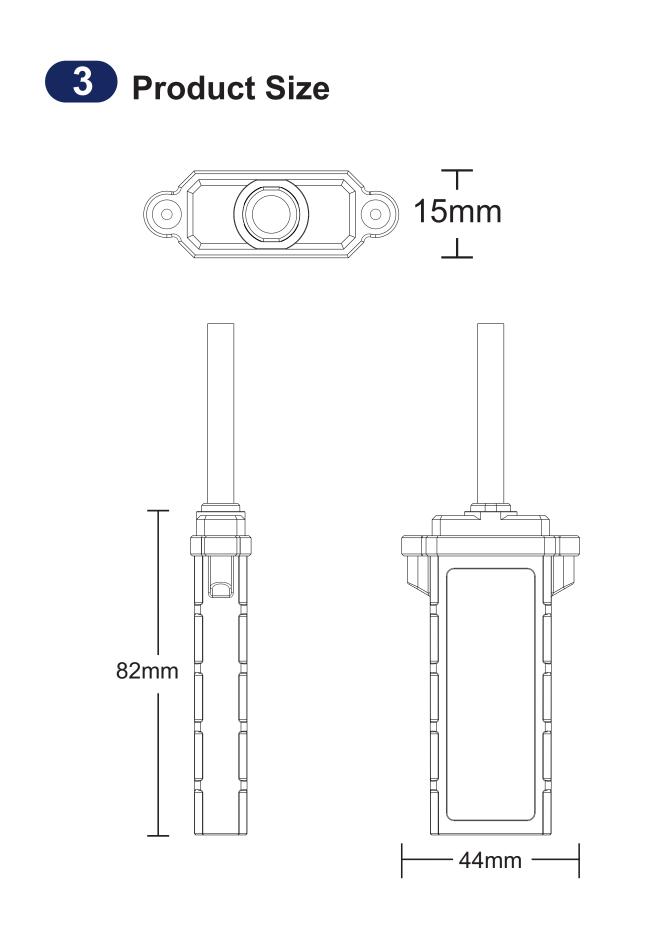


© 2024 TrackOne All rights reserved.



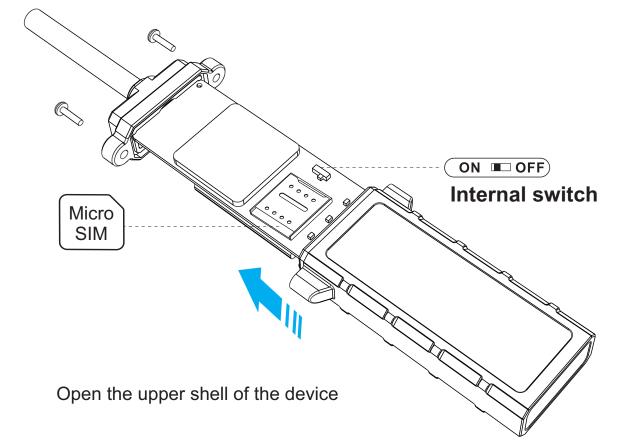

© 2024 TrackOne All rights reserved.

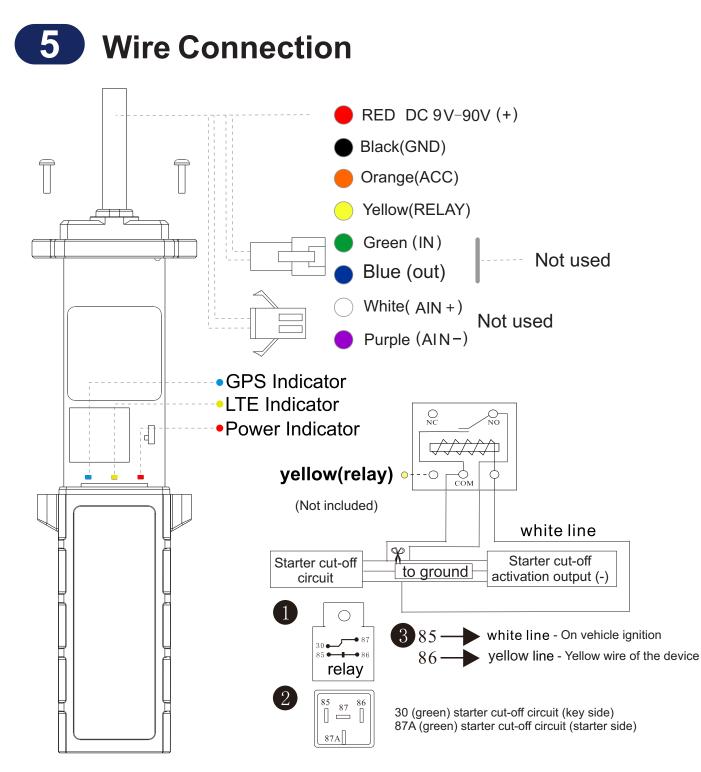

Note: Using a relay may increase power consumption and raise the risk of vehicle battery discharge. Its use is at the discretion of the user, and TrackOne disclaims all responsibility related to its use. Professional installation may be required.



Red LED Light(Power Supply Status)

Status	Meaning	
Slow flash	External power supply disconnected	
Steady on	External power is connected	
Off	Broken or sleeping	

Green LED Light(Network Status)

Status	Meaning	
Slow flash	Searching for network signal	
Steady on	The device is online	
Off	Broken or sleeping	

Blue LED Light(GPS Status)

Status	Meaning	
Slow flash	GPS initialized, searching for GPS signal	
Steady on	The device is connected to GPS	
Off	Broken or sleeping	

© 2024 TrackOne All rights reserved.



If you do not know how to install the device, it is recommended to seek the assistance of an experienced installer.Installation precautions:

- Ensure that the indicators are visible and that there are no metallic obstructions.
- Secure the device using a cable tie or double-sided adhesive tape.
- The device must be installed with the side containing the label facing

8 Operating Description

- Connect the device to the vehicle's power supply; the indicators will begin to flash.
- If the device uses its own built-in battery, the power indicator (red) will blink slowly after being manually powered on.
- A few seconds later, the LTE and GPS indicators will remain steadily lit, and the device will switch to normal operating mode.



9 Trouble Shooting

Problem	Description	Solution
	SIM card not installed	Check the SIM card
Failed to connect the	SIM card not installed properly	Install again
intbet	No LTE network	Move the device to the LTE network area
	Weak LTE network	Move the device to strong LTE network area
Location	SIM card has no LTE functions	Contact SIM card supplier to activate the LTE function
failed	Always reply "failed to get location"	Contact the supplier
No GPS Loction	Some poor signal areas like basement, tunnels are not able to acquire GPS signals	Move the device to open sky areas

TrackOne by Forguard access to portal



Play Store



App Store



Web app

© 2024 TrackOne All rights reserved.